k the electrical outlet for a defective socket or a
ugging in a lamp. If the outlet is satisfactory, check

. Push the
iron up and
ater passage

ATER. While
d by moving
lockwise to

acking. Pack
ugh for mail-
terial to en-
lug does not
cratch it.

tions.
ng to the dif-

erefore, iron
g first, then
es.
ds of fabrics
on an inside
e of the gar-
er the fabric
m water, or
SELECTOR
use a press
cloth is a
or a piece of
nt when it is

ron because

ratching the

on the right
shes iron on
oned on the

INTERNATIONAL TEXTILE CARE & LABELLING CODES.

As a guide to the International Textile Care Labelling Code the following symbols are noted for your information.

Washing

Dry Cleaning

Chlorine Bleaching

Ironing

A symbol crossed out indicates that the article of clothing must not be subjected to the particular treatment.

(DO NOT BLEACH)

WARRANTY

WARRANTED FOR A PERIOD OF ONE YEAR FROM

REPLACEMENT WITH A COMPARABLE APPLIANCE
APPLIANCE IS HAND CARRIED OR MAILED PREPAID
E CENTER. YOU MUST SHOW PROOF OF DATE OF

GAL RIGHTS AND YOU MAY ALSO HAVE OTHER
TATE. THIS WARRANTY APPLIES IN THE UNITED
MISUSE OR USE FOR COMMERCIAL PURPOSES.
TERS ARE INDEPENDENT BUSINESSES (NOT OWN-
LIST OF THE AUTHORIZED SERVICE CENTERS IS

FABRIC CHART

Fabrics	Dry Ironing	Steam Ironing	Instructions**
ACRYLIC Acrilan®, Creslan®, Orlon® ACETATE Acele®, Celanese®, Estron® METALLICS SUEDE	A	LOW STEAM ZONE **(See Note)**	Use caution because these synthetics may melt at high temperatures. Press on wrong side while damp. Press on wrong side. Do not spray. Cover ironing board with brown paper and use brown paper as press cloth.
SILK NYLON Qiana®, Antron® RAYON	B	LOW STEAM ZONE **(See Note)**	Press fabrics with nubby weave when dry; other fabrics when slightly damp. Press wrong side. Cool slightly before removing from board. Press on wrong side while damp.
POLYESTER Ban-lon®, Dacron®, Encron®, Fortrel®, Kodel®, Trevira®	C	LOW STEAM ZONE **(See Note)**	
PERMANENT PRESS, WASH 'WEAR COTTON BLENDS, TRIACETATE Arnel®	D	LOW STEAM ZONE **(See Note)**	
WOOL, ANGORA, CASHMERE, MOHAIR	1	MEDIUM STEAM ZONE	On the wrong side, steam iron with a press cloth or dry iron with a damp press cloth. Do not press completely dry.
COTTON	2	HIGH STEAM ZONE	Steam iron lightweight cottons while dry. Dampen heavier weight cottons for steam or dry ironing. Plisse, seersucker and puckered fabrics should not be ironed or the crinkle may flatten out.
LINEN VELVET, VELOUR, CORDUROY	3	HIGH STEAM ZONE	Iron medium or heavy weight linens while slightly damp. Turn garment wrong side out. Hold iron a few inches above the garment. Use the extra blast of steam.

*Fiber manufacturer's trademark
**Check garment for specific ironing instructions. Always follow manufacturer's instructions.

Note: If Steam ironing fabrics in the A, B, C or D zone, use a press cloth and a low steam setting.

Proctor-Silex®
2209 SULPHUR SPRING RD.
BALTIMORE, MD. 21227

091530 REV. A G18 Printed in U.S.A.

P.S.
PROCTOR-SILEX®

LIGHTWEIGHT
Steam/Dry Iron
SPRAY FEATURE *

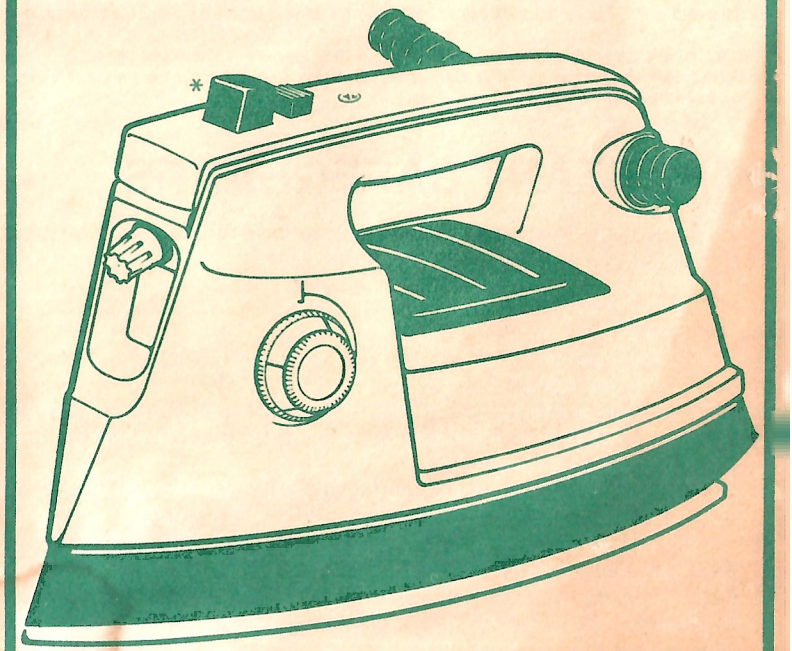

* *Available on certain models only.*